


things to know about shock absorbers.....

Travel when an airbag is installed is limited to the travel of the bag. A #2500 double convolute collapses to 3" and extends to 8", for maximum travel of 5". On shorter shocks, travel is less EX: 9" closed, 13" extended allows 3" of travel. This will give you 6" when used with Control Arms, and 3" when used on straight axle due to the pivot point. Also, question any competitor that says there Airshock is worth 2 or 3 times as much. Buy from us and if you are not 100% satisfied, email sales@airridepro.com for a 100% refund on unused products. We have decided to enter the Hotrod market to give our competitors much needed competition

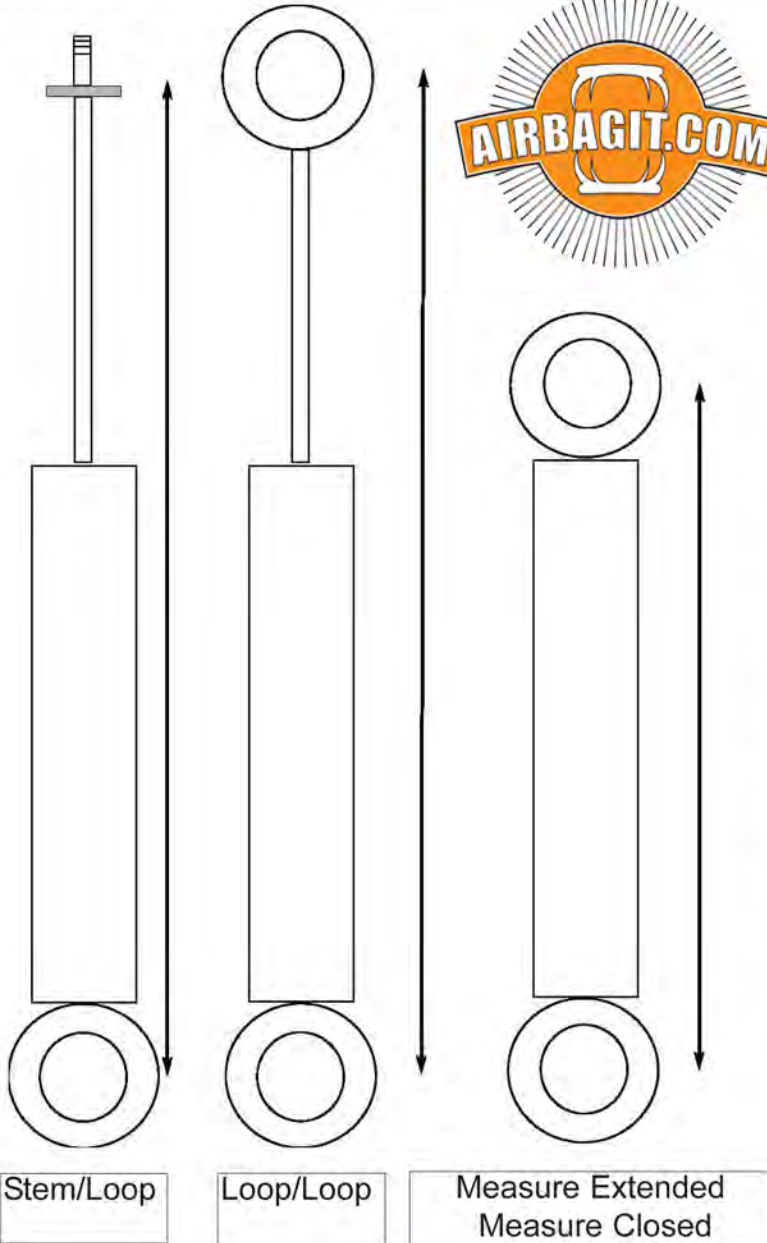

SHOCK LENGTHS

Closed	Open
10.00"	13.50"
12.00"	15.00"
12.50"	21.50"
13.00"	18.50"
14.00"	18.00"
16.00"	25.00"
18.00"	29.50"
20.00"	33.00"
21.00"	35.00"
22.00"	33.00"
25.00"	36.00"
25.00"	43.00"

SHOCK LENGTHS

are measured from center of loop to loop, or stem pad to loop

